

Quick instruction

simalube installation, removal and disposal


 <p>Direct installation</p>	 <p>simalubes can be installed in all positions - even under water</p>	 <p>simatec simatec World of Maintenance</p> <p>Download on the App Store GET IT ON Google Play</p>  <p>Determine dispenser size and runtime with „Calculation Pro“ (Calculation Pro is part of the app „simatec World of Maintenance“, which is available as Android or iOS version)</p>	
 <p>Clean lubrication point</p>	 <p>Remove grease nipple</p>	 <p>Screw in reducing nipple (Seal thread with sealing tape or other sealant)</p>	 <p>Screw in connector nipple (290-30110)</p>
 <p>Prelubricate the lubrication point with a grease gun</p>	 <p>Remove connector nipple</p>	<p>Grease Oil</p>  <p>Remove black closing cap respectively cut off yellow closing plug</p>	
 <p>Set runtime</p>	 <p>Write activation date on dispenser</p>	 <p>Screw in lubricator</p>	 <p>Regularly check simalube (Can be managed in the „simatec World of Maintenance“ app)</p>

Quick instruction

simalube installation, removal and disposal



Disposal

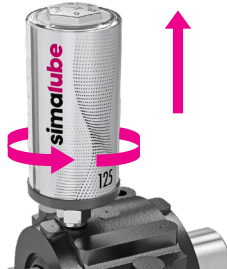

Unscrew empty simalube and either refill or dispose it



Unscrew the drive head



Dispose of drive head unassembled in battery recycling and empty housing in plastics recycling