


Quick instruction






simalube IMPULSE installation, removal and disposal



simatec simatec World of Maintenance

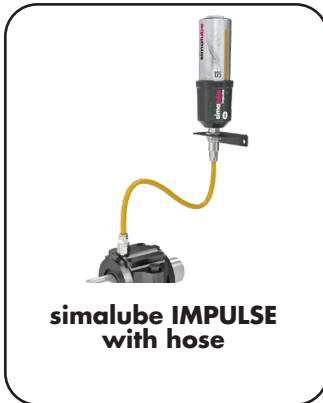



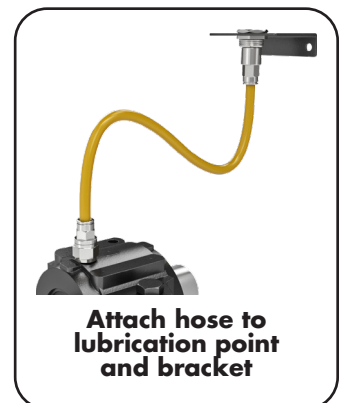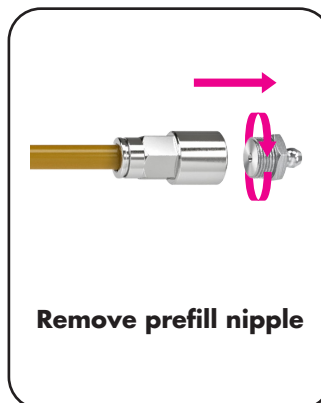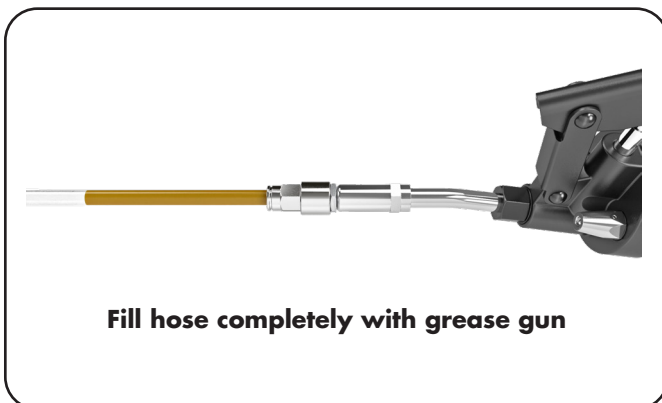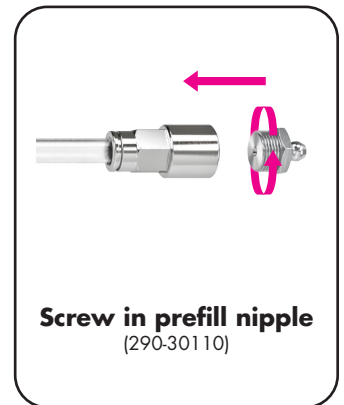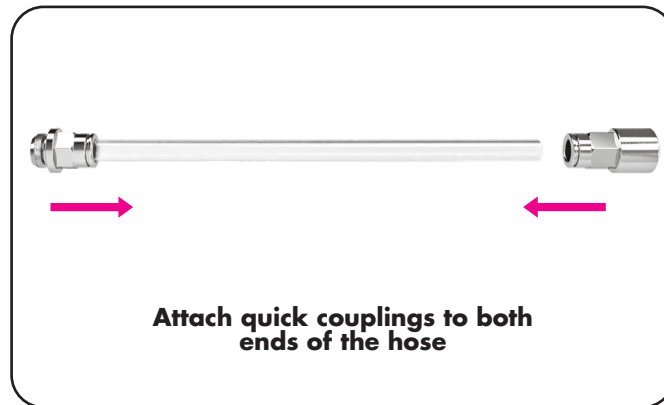




Download on the App Store | GET IT ON Google Play

Determine dispenser size and runtime with „Calculation Pro“
(Calculation Pro is part of the app „simatec World of Maintenance“, which is available as Android or iOS version)

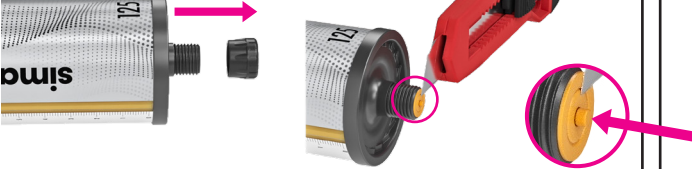

Quick instruction

simalube IMPULSE installation, removal and disposal

 <p>Screw in prefill nipple (290-30150)</p>	 <p>Prelubricate IMPULSE carefully with grease gun</p>	 <p>Remove prefill nipple and lubricate O-ring slightly</p>	 <p>Seal thread with sealing tape</p>
 <p>Screw IMPULSE onto bracket</p>	<p>Grease Oil</p>  <p>Remove black closing cap respectively cut off yellow closing plug</p>		 <p>Set runtime</p>
 <p>Write activation date on dispenser</p>	 <p>Insert battery pack</p>	 <p>Screw on dispenser, IMPULSE is activated, LED flashes 2x green</p>	 <p>Check correct position of the dispenser</p>
 <p>Regularly check simalube (Can be managed in the „simatec World of Maintenance“ app)</p>			

Quick instruction

simalube IMPULSE installation, removal and disposal



Disposal



Unscrew empty simalube and either refill or dispose it



Unscrew the drive head



Dispose of drive head unassembled in battery recycling and empty housing in plastics recycling



Remove battery pack



Dispose of battery pack in battery recycling



Insert new battery pack



Check O-ring



Screw on new dispenser, IMPULSE is activated, LED flashes 2x green



Regularly check simalube
(Can be managed in the „simatec World of Maintenance“ app)