

Technical information: elevators and escalators





Elevator lubrication with simalube®

The guide rails on elevators need to be permanently lubricated in order to prevent dry friction. By dispensing precisely the right amount of lubricant, the **simalube**® lubrication system reduces the need for maintenance and cleaning work on the elevator cabin and shaft. It is therefore also a particularly good system to use on maintenance-intensive elevators installed on the outside of buildings and on panoramic elevators.




«simalube® provides constant lubrication, extends product life and cuts maintenance costs»

Diverter Pulley

The **simalube*** lubricator is used for lubricating the bearing of the diverter pulley. The lubricator is mounted directly on the grease point of the pulley.





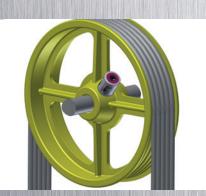



The **simalube*** lubrication system is the optimal solution for the guide rail. It protects the rail with a constant film of oil and cleans it at the same time. The **simalube*** elevator brush set is fixed directly to the elevator roof or the guide rail shoe.





Elevator ropes

The elevator ropes can easily be lubricated with the **simalube*** lubricator. Here, the **simalube*** square brush continuously applies the lubricant to the ropes and cleans it simultaneously.





Escalator Iubrication with simalube®

Escalators that are in permanent use often begin to squeak. To avoid this, optimal lubrication of the equipment is required.

simalube® lubricates drive chains, step chains and step guides automatically, continuously and economically. The simple installation process, the fully adjustable dispensing period and the pinpoint lubrication accuracy make **simalube®** an indispensable system for escalators and moving walkways.




«simalube® offers lubrication systems for every type of escalator»

Drive chain

The **simalube**® dispensing unit oils the chain continuously; the brush set is fixed directly to the U-profile.




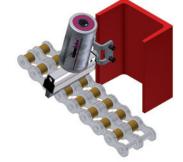



The brush lubricates the chain links on both sides; the plastic rollers are only slightly dampened.



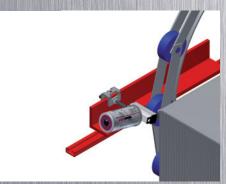

Escalator step guides

The lubrication system comprises a short brush, a mounting kit and a lubricator and is suitable for use with Schindler escalators. The system is fixed directly to the step.





Elevator brush set for the lubrication of guide rails for widths of 5 to 16 mm and depths up to 25 mm.

Applications and advantages

simalube® applications for elevators, escalators and moving walkways:

- Guide rails ■ Diverter pulley
- Traction cables
 - Escalator step guides Step chains

Drive chains

Benefits of the simulube[®] lubrication systems:

The easy-to-use **simalube**® lubrication systems guarantee optimal care of elevators and escalators. These special lubrication systems are exceptionally reliable and efficient. Assembly sets are available for retrofitting elevators and escalators made by the best-known manufacturers.

Further benefits:

- Reduction of service requirements and maintenance costs
- No more oil spillage or splashes
- Simple to retrofit existing installations
- Improved occupational safety (no risk of slipping on excess oil)
- Constant application of lubricant
- Stepless setting of lubricant dispensing time from one month to one year
- Refillable oil lubricator

Specific benefits for elevators:

- Reliable lubrication of guide rails and traction cables
- Elevator runs quietly
- Containers to catch excess oil no longer required

Specific benefits for escalators and moving walkways:

- Reliable lubrication of escalator guide rollers, drive chains and step chains
- Silent operation without unpleasant squeaking noises
- Optimally lubricated guides prevent any build-up of electrostatic charge or sparking



We will gladly inform you about the application of **simalube**® products in the wood industry.

Our specialists have a highly-qualified technical knowledge and will show you how automatic lubrication can reduce costs and extend the service life of your machines.

Pomac Lub Services Goudenappelstraat 19 B-8780 OOSTROZEBEKE

Tel.: +32 (0) 51 31 62 05 Fax: +32 (0) 51 30 96 21 info@simalube.be www.simalube.be